

TC-05

Temperature and Humidity Controller Manual

- Power supply: DC 12 V
- Temperature measurement range: 0 to 6°C
- Humidity range: 0~100% RH
- Control precision: 0.1°C, 0.1% RH
- Test probe: Integrated sensor
- Output: 10A delay
- Dimensions: 65 x 55 x 28 mm

- 1) Set the start temperature: Long press the (+) key, start the flashing temperature, set start temperature by + / - key
- 2) Set stop temperature: Long press (-) button, stop flashing temperature, set stop temperature by + / - key
- 3) Set to start humidity: Long press the (+) key, start the humidity value flashing, set by + / - key launch humidity value
- 4) Set stop humidity: long press (-) to stop humidity value, set by + / - key to stop the humidity value



● ● indicator light delay closed      indicator light is not on Relay disconnect